



# INSTALL INSTRUCTIONS

**TURBO MUFFLER DELETE KIT: GEN 3 MQB**  
SKU# 7482 MFG# SE-005KT

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.  
PLEASE VISIT [WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM) AND SEARCH SKU# 7482



## ***TOOLS REQUIRED:***

- T25 TORX
- T30 TORX
- 3MM HEX
- 5MM HEX
- PLIERS
- 7MM SOCKET
- 8MM SOCKET
- RATCHET



SKU# 7482 | MFG# SE-005KT

7716 WILES RD. CORAL SPRINGS, FL 33067  
[WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM)

1. Remove the 2 T-25 torx screws securing the front intake snorkel to the radiator support.



2. Remove the coolant line from the front intake snorkel.



3. Remove the front intake snorkel by pushing the passenger side of the snorkel towards the engine and then rotating upwards.



4. Remove the vacuum hose and secondary air pump hose if equipped.





5. Remove the clamp securing the inlet hose to the air box.



6. Grasp the factory air box and remove by pulling up.



7. Remove the 7mm clamp securing the inlet hose to the turbo.




8. Remove the T-30 screw (blue arrow) and loosen the 7mm hose clamp (red arrow).




9. Loosen the 7mm clamp and slide the turbo outlet pipe to the side enough to remove the rubber coupler and access the OEM turbo muffler




10. Remove (3) 5mm allen key bolts securing original turbo muffler. Two of the bolts are visible from above, and the last is centered at the bottom. Remove turbo muffler and take care not to drop o-ring seal as this will be reused.

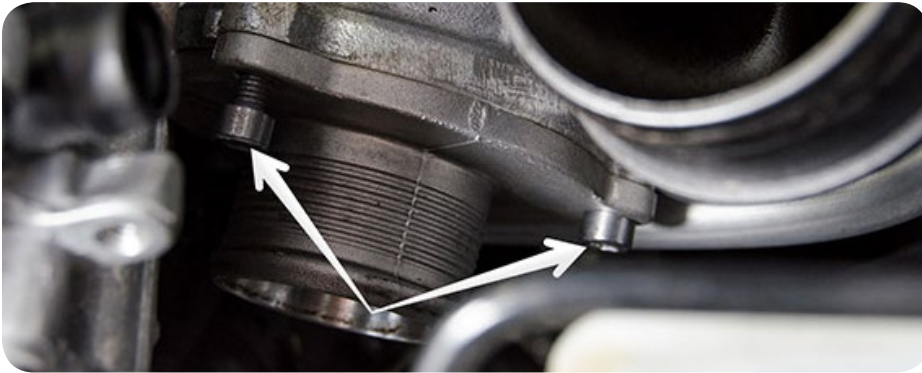

11. Ensure that the O-Ring on the turbo stays in the original groove. If the O-Ring falls out, or does not stay in place use a small amount of grease to hold it in place.

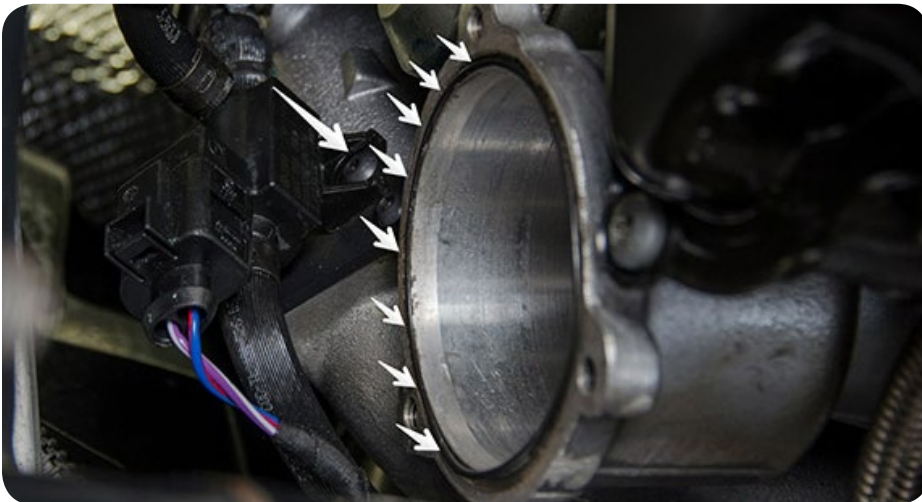

12. Install the included O-Ring into the groove on the smaller end of the turbo muffler delete. If it is not staying in the groove, use a small amount of grease to ensure the O-Ring does not fall out. Then install the turbo muffler delete and secure using the (3) factory allen key bolts.

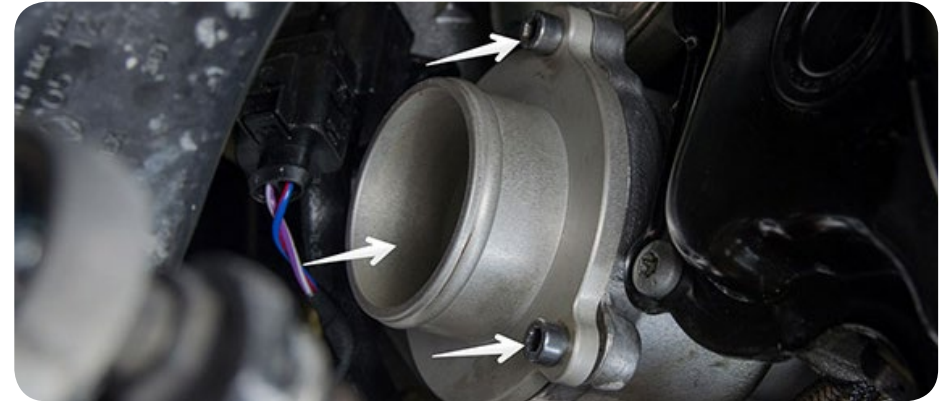

13. Install Spulen coupler with logo facing up as shown. This will be a good starting point but may require some rotation of the coupler for perfect fitment with pipe. Install supplied clamps and fasten on turbo muffler delete.



14. Reinstall turbo outlet pipe and airbox in reverse order.  
**ENJOY YOUR SPULEN TURBO MUFFLER DELETE!**